






41920 PACIFICO

PALLISER®


Dimensions shown as Width x Depth x Height. Specifications are correct at time of printing and are subject to change without notice.
LHF - left hand facing **RHF** - right hand facing **IA** - inside arm to inside arm. For SKU options: **R**=Manual Recline, **E**=Power Recline

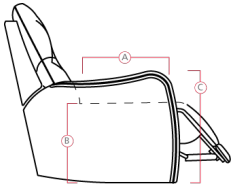

1R-Manual Recliner
 36 x 39 x 42"
 92 x 99 x 106cm
 IA: 23" / 59cm




2R-LHF Arm, Man Recliner
 30 x 39 x 42"
 75 x 99 x 106cm




3R-RHF Arm, Man Recliner
 30 x 39 x 42"
 75 x 99 x 106cm



4R-Armless Loveseat Man Recl
 46 x 39 x 42"
 118 x 99 x 106cm



51-Sofa Recliner
 83 x 39 x 42"
 210 x 99 x 106cm
 IA: 70" / 177cm




5R-LHF Arm, RHF Wedge, Man Recl
 42 x 39 x 42"
 107 x 99 x 106cm
 IA: 23" / 59cm




6R-RHF Arm, LHF Wedge, Man Recl
 42 x 39 x 42"
 107 x 99 x 106cm
 IA: 23" / 59cm



7R-RHF Wedge, Man Recliner
 36 x 39 x 42"
 91 x 99 x 106cm



8R-Armless Manual Recliner
 23 x 39 x 42"
 59 x 99 x 106cm



9R-LHF Wedge, Man Recliner
 36 x 39 x 42"
 91 x 99 x 106cm

Dimensions

- A - Seat Depth - 22" / 56cm
- B - Seat Height - 21" / 53cm
- C - Arm Height - 26" / 66cm

Features

- Chaise styling for ultimate comfort and support in full recline
- Hardwood, softwood and engineered wood products; all joints pinned & glued for uniformity & strength
- Back: 11 or 12 gauge sinuous springs which are engineered to provide lasting comfort and strength
- Seat: 8 gauge sinuous wire springs for superior ride and comfort
- Seat Fill - 1.8 lb high resilience foam for superior comfort without loss of support
- Back Fill - Blown fiber back cushions
- Inside Latch for manual operation
- D-pull for manual operation of armless skus
- Toggle Switch for power operation
- LED cupholder switch for power operation
- Touch button for power operation

Options

- Stainless Steel Cupholder
- Antique Cupholder
- LED cupholder with groundlighting
- Wireless Bass Shaker



41920 PACIFICO

PALLISER®

Popular Configurations

Note: Always assemble configurations from right hand facing to left hand facing components.

How We Measure

Height - measured from the highest point of the back pillow to the floor.

Depth - measured from the front edge of the seat cushion to the top of the back.

Width - measured from the widest point of the arm or arm pillow to the widest point of the opposite arm or arm pillow.

Arm Height - measured from the top of the arm to the floor.

Seat Height - measured from the crown of the seat cushion to the floor.

Warranty


Wood Frames, Springs or Webbing - ten year warranty

Metal Frames - two year warranty under normal household use

Motion Reclining Mechanisms - seven year warranty

Reclining Chairs, Sofabed Mechanisms and Sofabed Mattresses - two year warranty


Seat Cushion Foam and Fibre-filled Components - five year pro-rated warranty

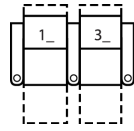

2 SEATS STRAIGHT (1_/3_)

66 x 67"


167 x 170cm

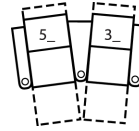

2 SEATS CURVED (5_/3_)

72 x 69"


182 x 175cm

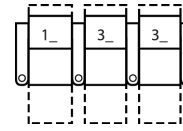

3 SEATS STRAIGHT (1_/3_/3_)

96 x 67"


243 x 170cm

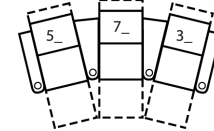

3 SEATS CURVED (5_/7_/3_)

107 x 71"


271 x 181cm

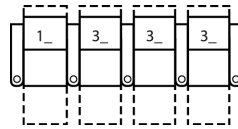

4 SEATS STRAIGHT (1_/3_/3_/3_)

125 x 67"


318 x 170cm

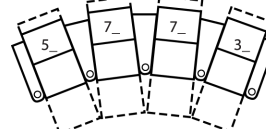

4 SEATS CURVED (5_/7_/7_/3_)

141 x 76"


357 x 192cm

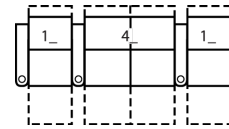

4 SEAT STRAIGHT (1_/4_/1_)

119 x 67"


302 x 170cm



2 SEATS STRAIGHT (2_/3_)

59 x 67"


151 x 170cm

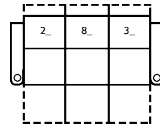

3 SEAT STRAIGHT (2_/8_/3_)

83 x 67"

210 x 170cm

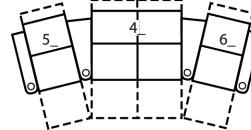

4 SEATS CURVED (5_/4_/6_)

130 x 72"

330 x 182cm